
CP310 COVER PLATE

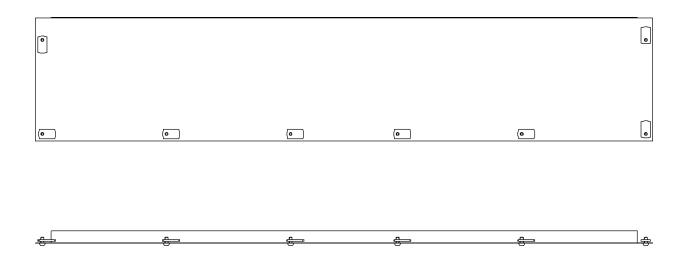

HOW TO ATTACH COVER PLATE

STEP 1.


POSITION WELD NUTS AND SCREWS AS SHOWN IN THE ABOVE PICTURE.

STEP 2.

POSITION PLATE TO BOTTOM OF FOUNTAIN KEEPING EQUAL MARGIN ON EACH SIDE.

STEP 3.

TIGHTEN SCREWS - AS SCREWS ARE DRAWN UP THE WING OF THE WELD NUT WILL SANDWICH THE FLANGE OF THE FOUNTAIN.

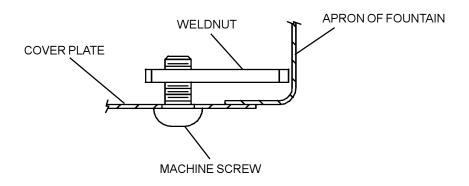

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR CALL 1.800.323.0620 ELKAY MANUFACTURING COMPANY • 2222 CAMDEN COURT • OAK BROOK, IL 60523 • 630.574.8484