

Installation Instructions

Cane Touch Apron

**This kit is designed to be used with models
manufactured after July 2007.**

Required Tools:

To install this kit the following tools are required:


- Phillips Head Screwdriver
- Pinned Torx Head Driver
- Power Drill with 1/8" Drill Bit
- Hammer and Center Punch

Installation Procedure:

1. Using cane apron as a template use a center punch to mark hole locations on front of left and right side panels.
2. Drill 1/8" diameter holes at marked locations. (Center punch hole locations before drilling).
When drilling the right hand hole on refrigeration units, be certain to drill straight.
CAUTION: Keep the drill bit away from the refrigeration condenser. If the drill damages or punctures the condenser refrigeration tubing severe and expensive damage to the refrigeration system will result.
3. Loosen and remove (2) front screws from underside of cooler dispenser panels.
4. Install cane touch apron to underside of cooler dispenser panels and reuse fasteners removed in step 3 above.
5. Attach lower edges of apron to cooler side panels with screws provided. (Using two holes drilled in step 2 above)

CANE TOUCH APRON COLOR OPTIONS

PART NO.	FINISH
28813C	Stainless Steel
28814C	Platinum Vinyl
28815C	Light Gray Vinyl

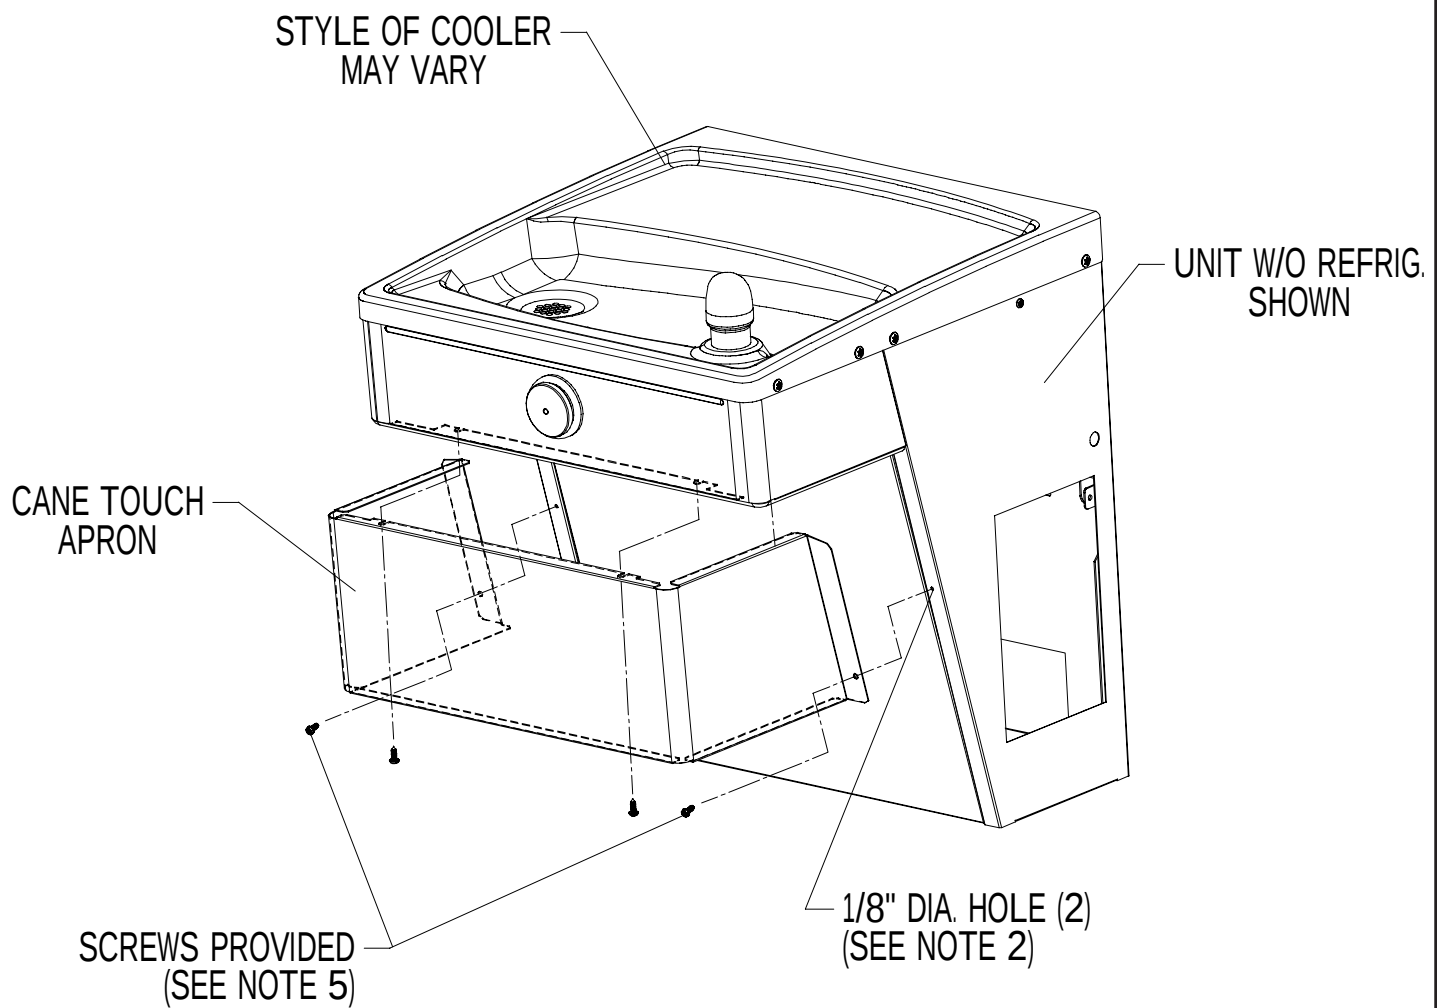

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.323.0620